


INSTALLATION AND MAINTENANCE MANUAL APENDIX | PICTURES

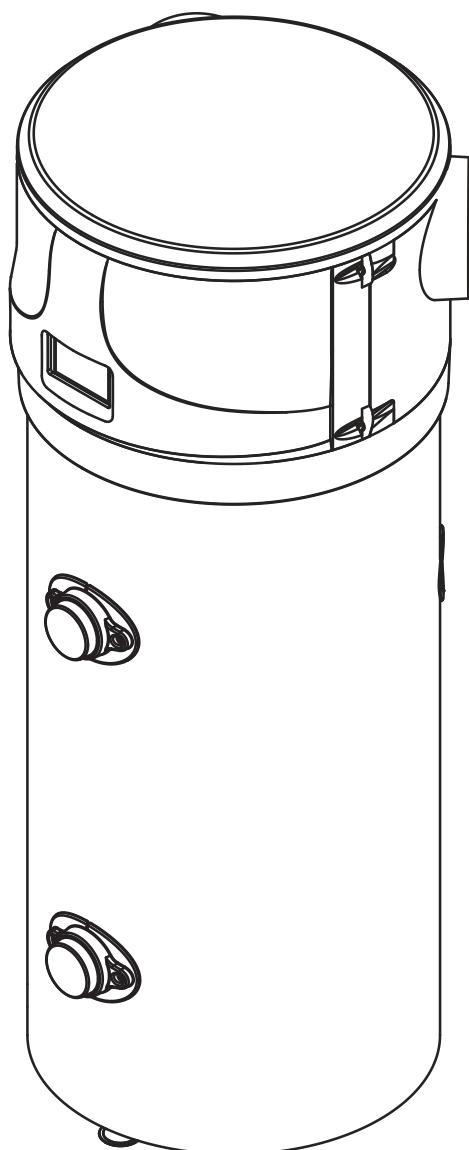

HPWH 4.11 FS 200 U01
HPWH 4.11 FS 200 U01 S
HPWH 4.11 FS 260 U01
HPWH 4.11 FS 260 U01 S

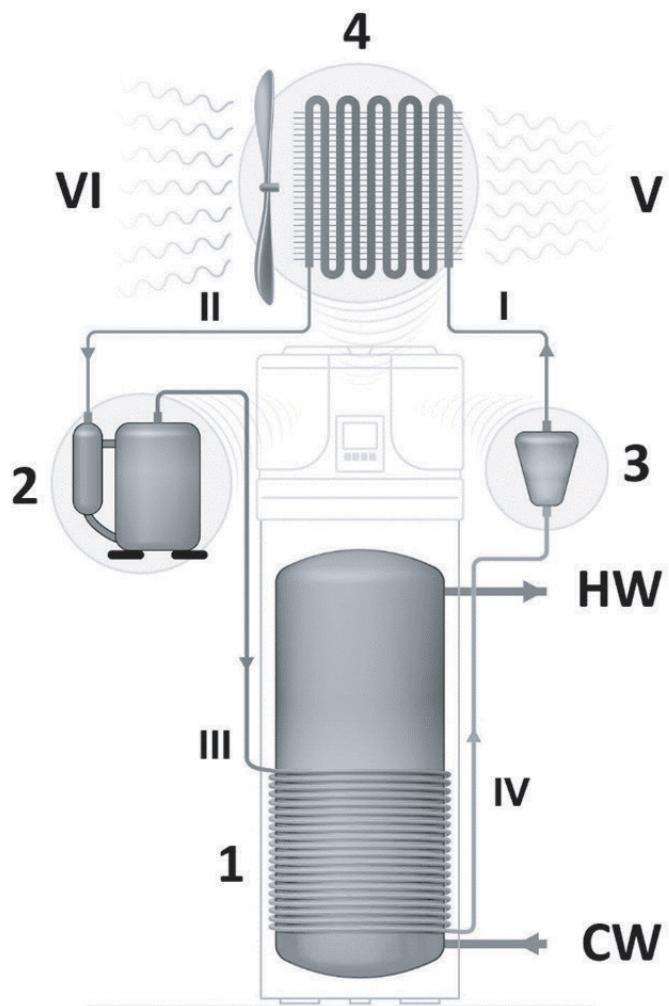


Fig.1

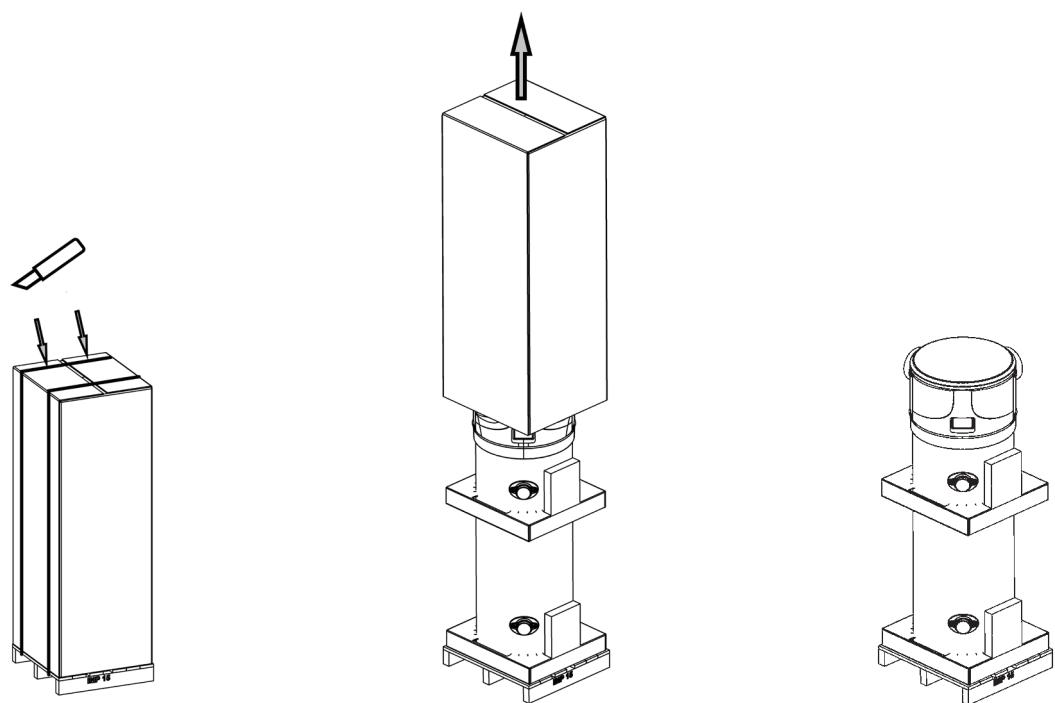


Fig.2

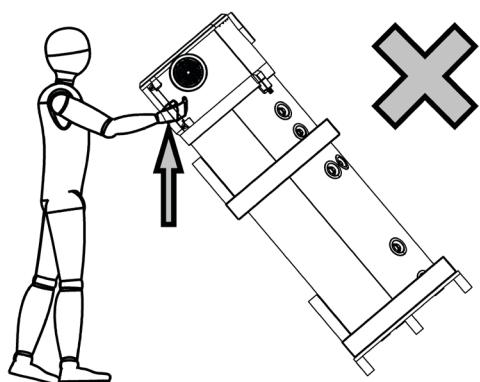


Fig.3

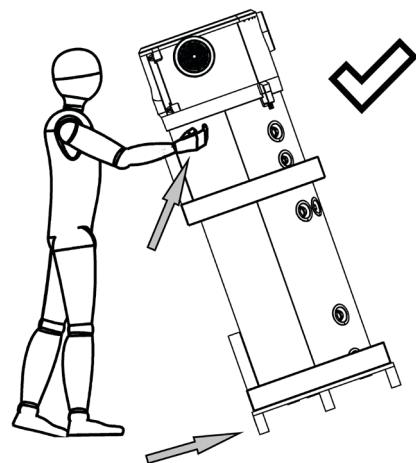


Fig.4

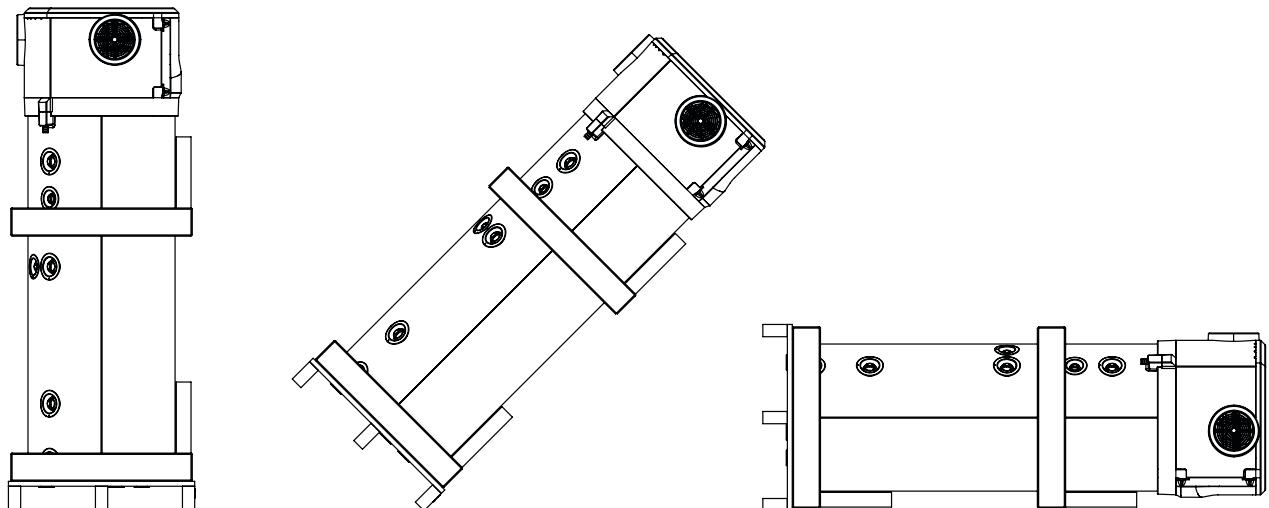


Fig. 5

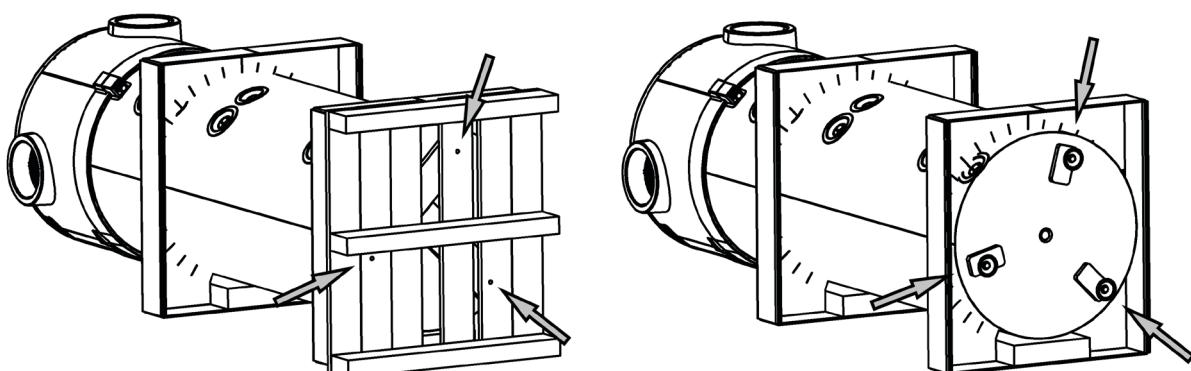


Fig. 6

Fig. 7

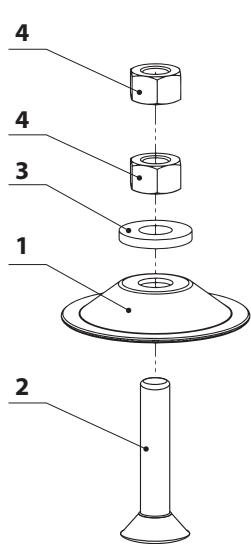


Fig. 8

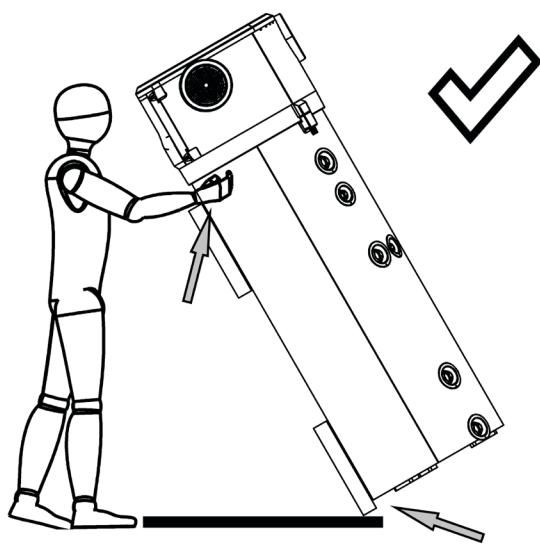


Fig. 9

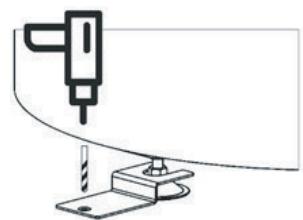


Fig. 10

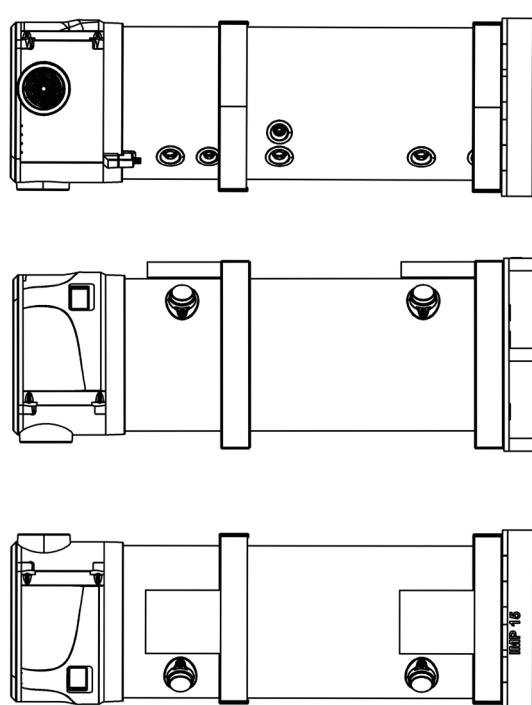


Fig. 11

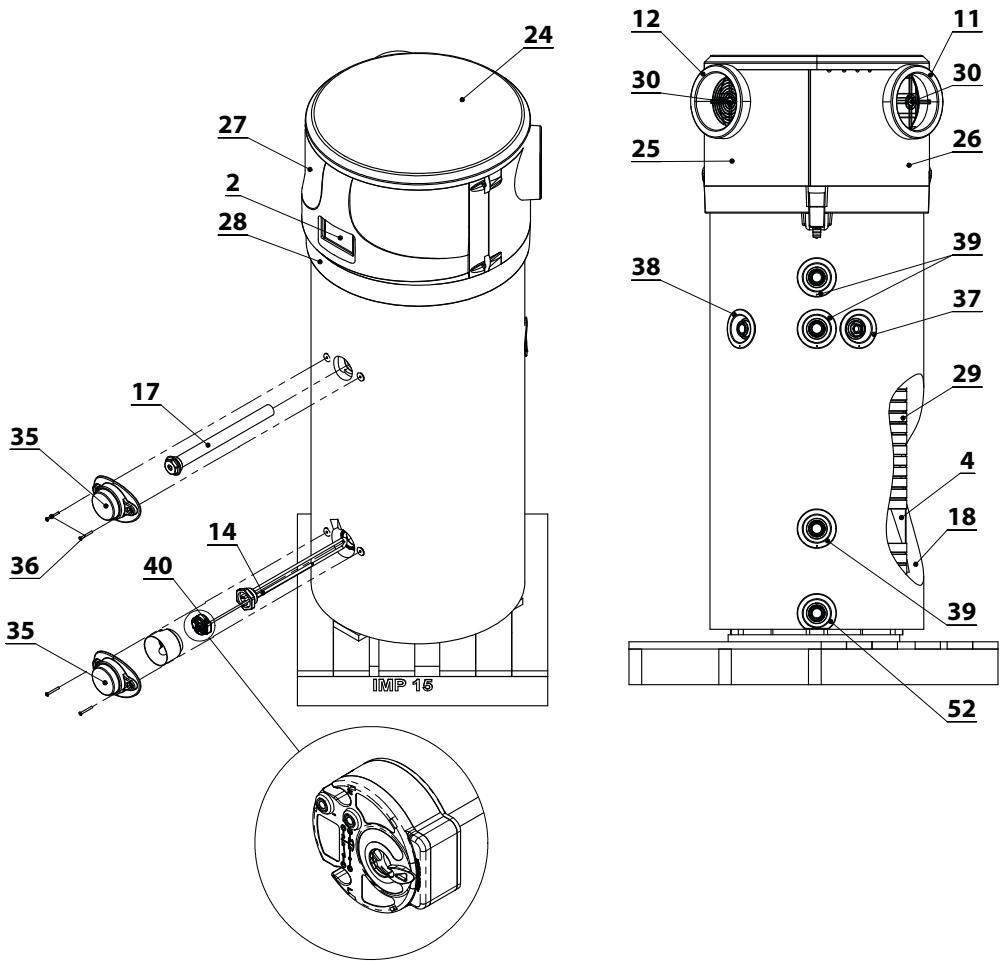


Fig. 12

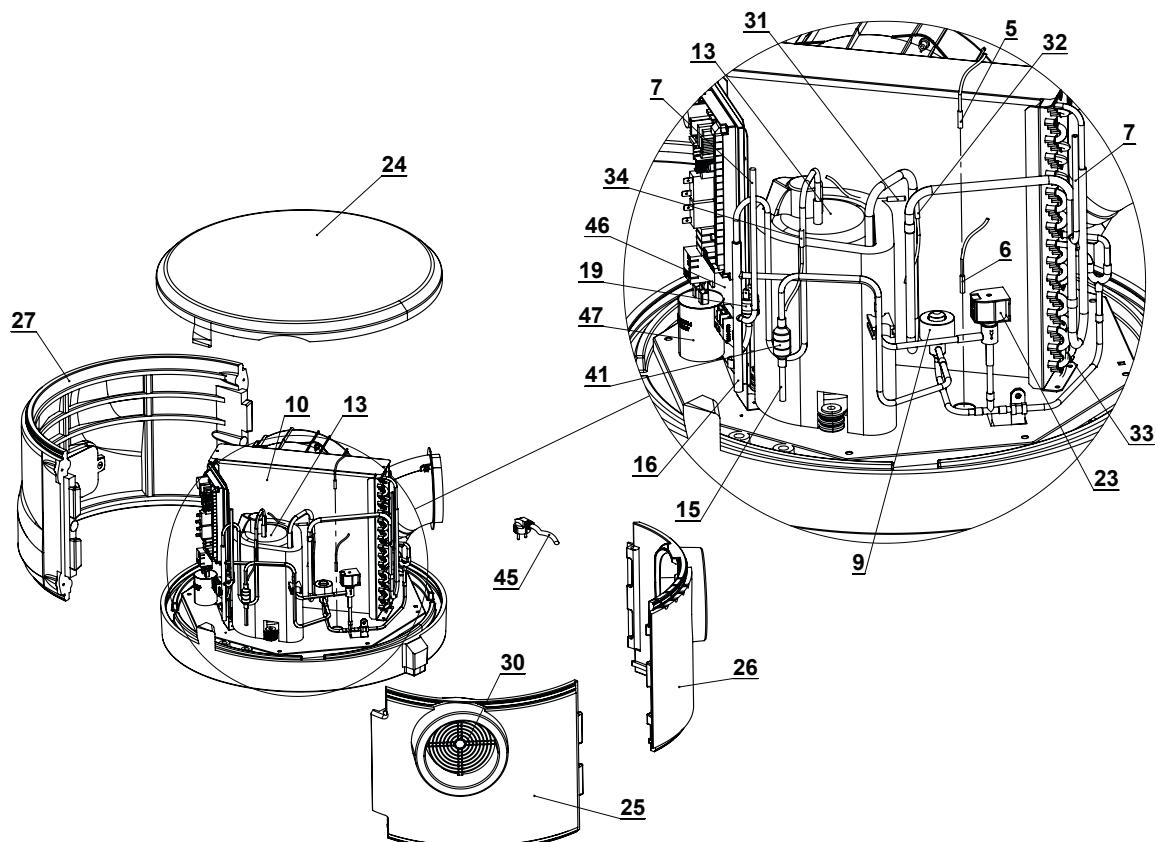


Fig. 14

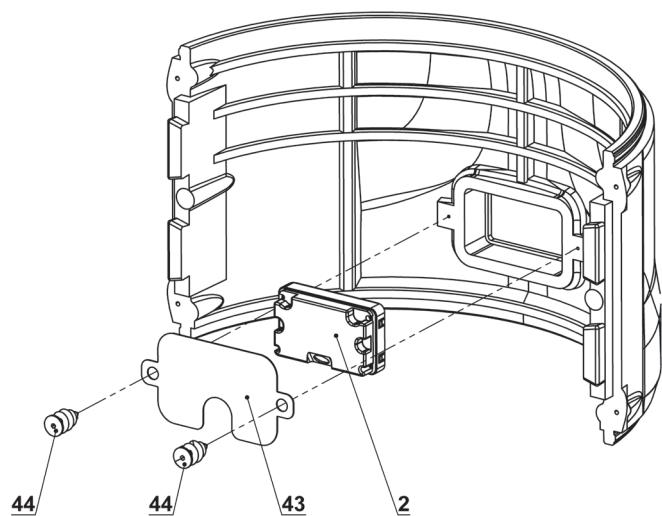
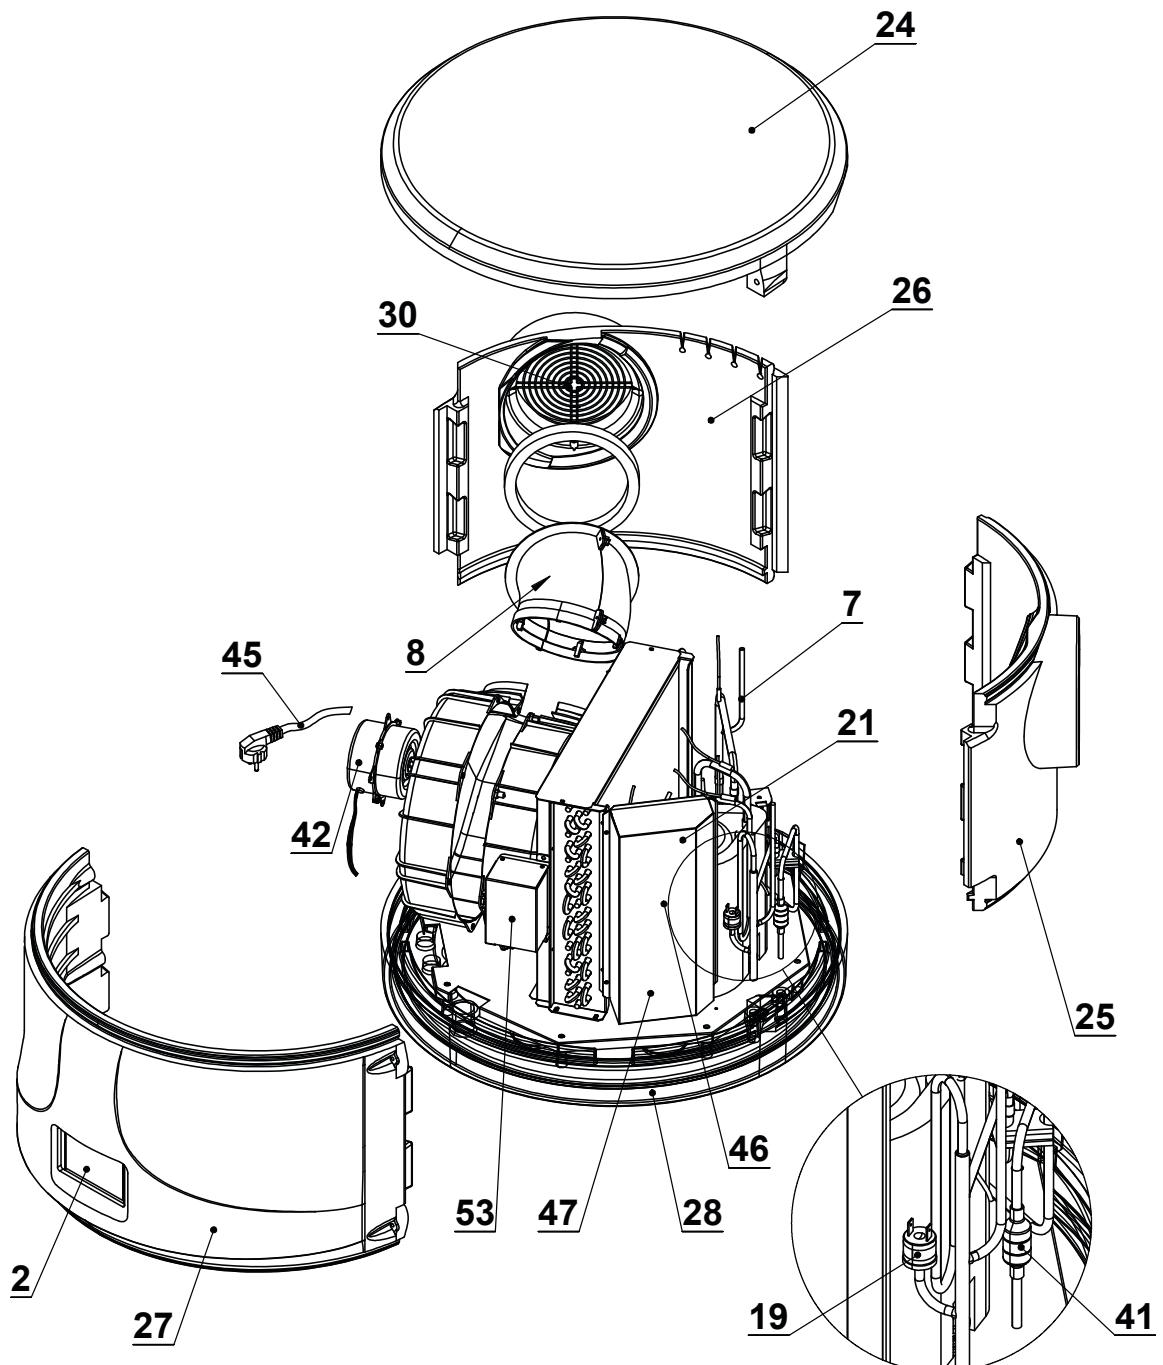


Fig. 15

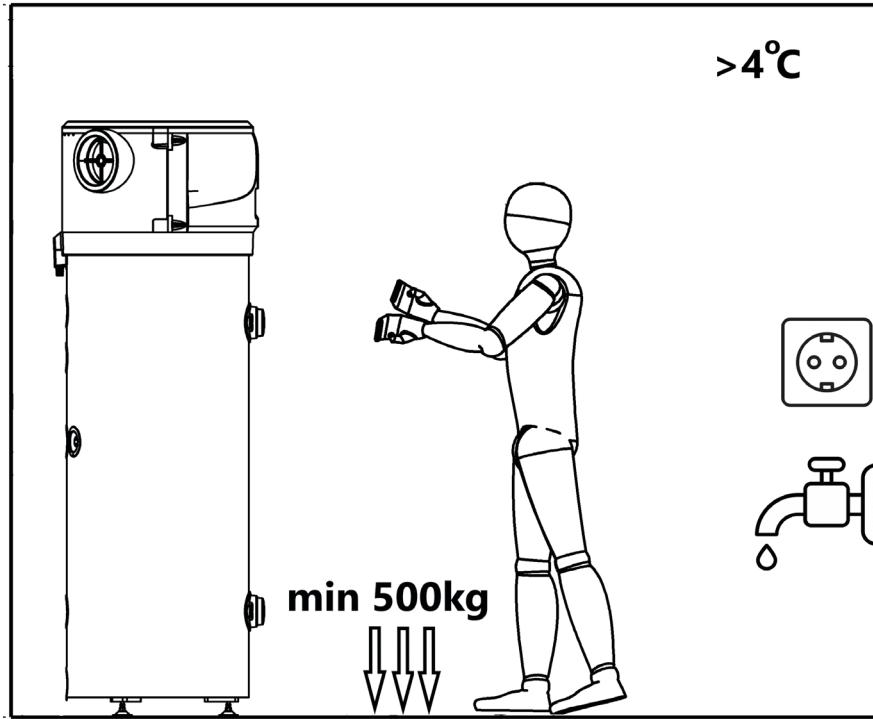


Fig. 16

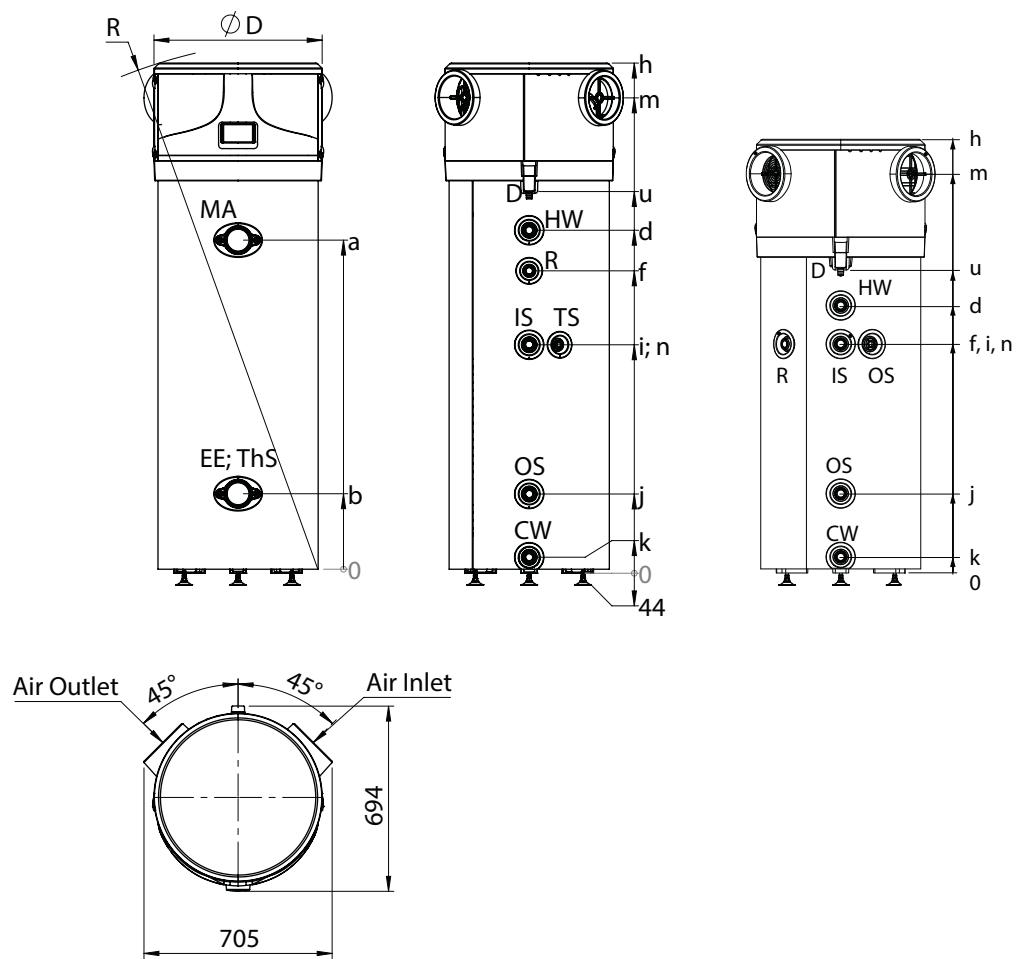


Fig. 17

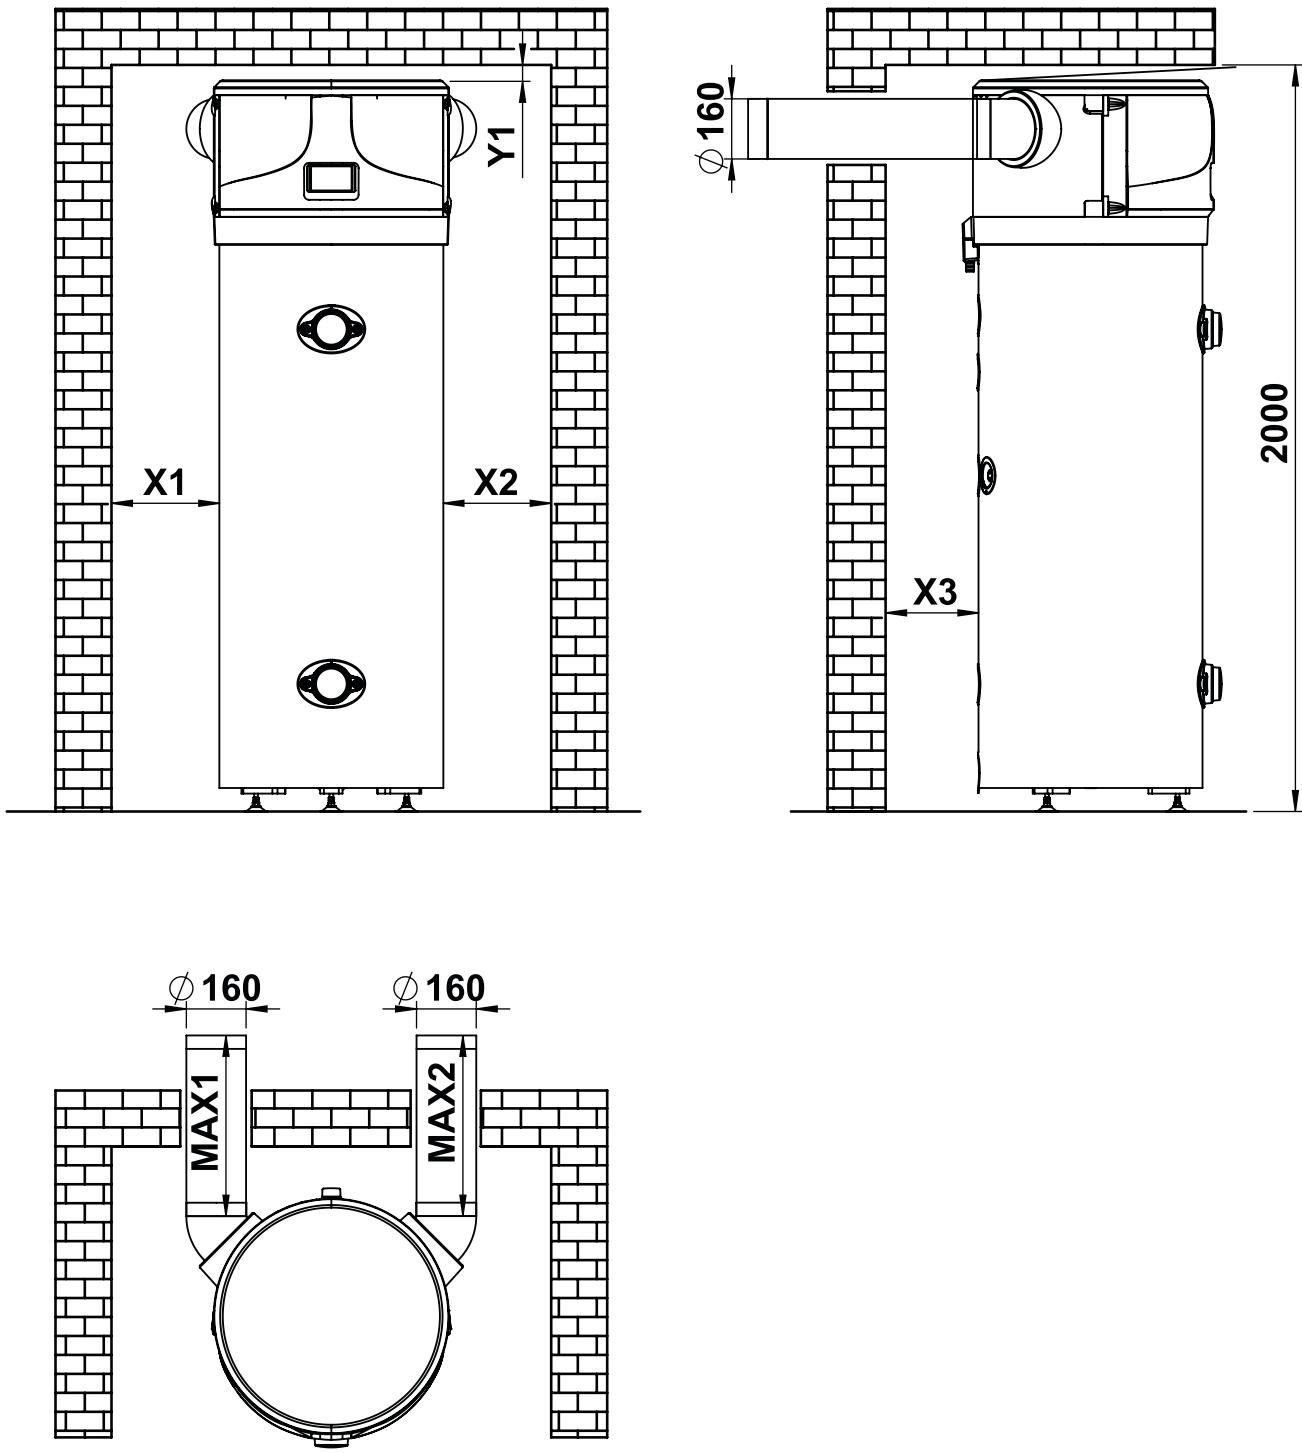


Fig. 18

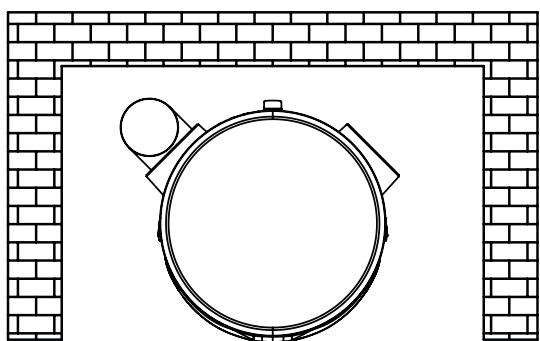
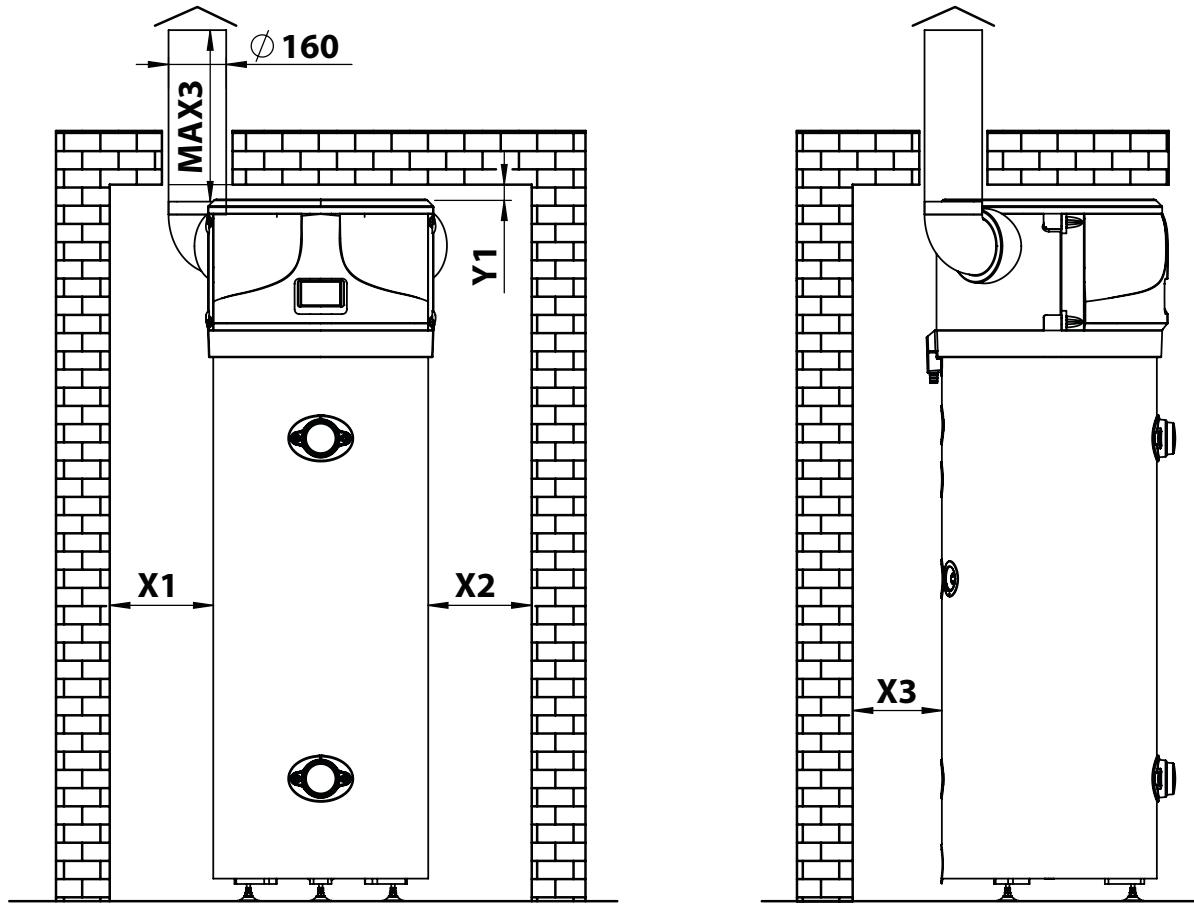


Fig. 19

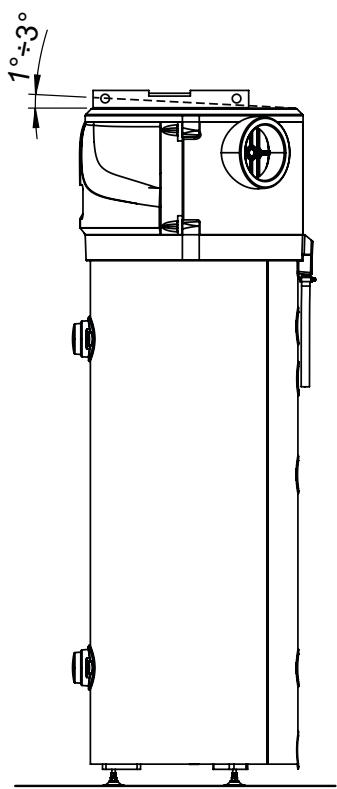
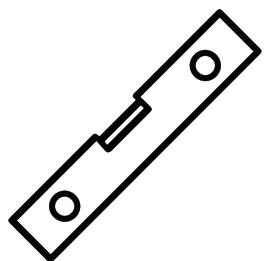
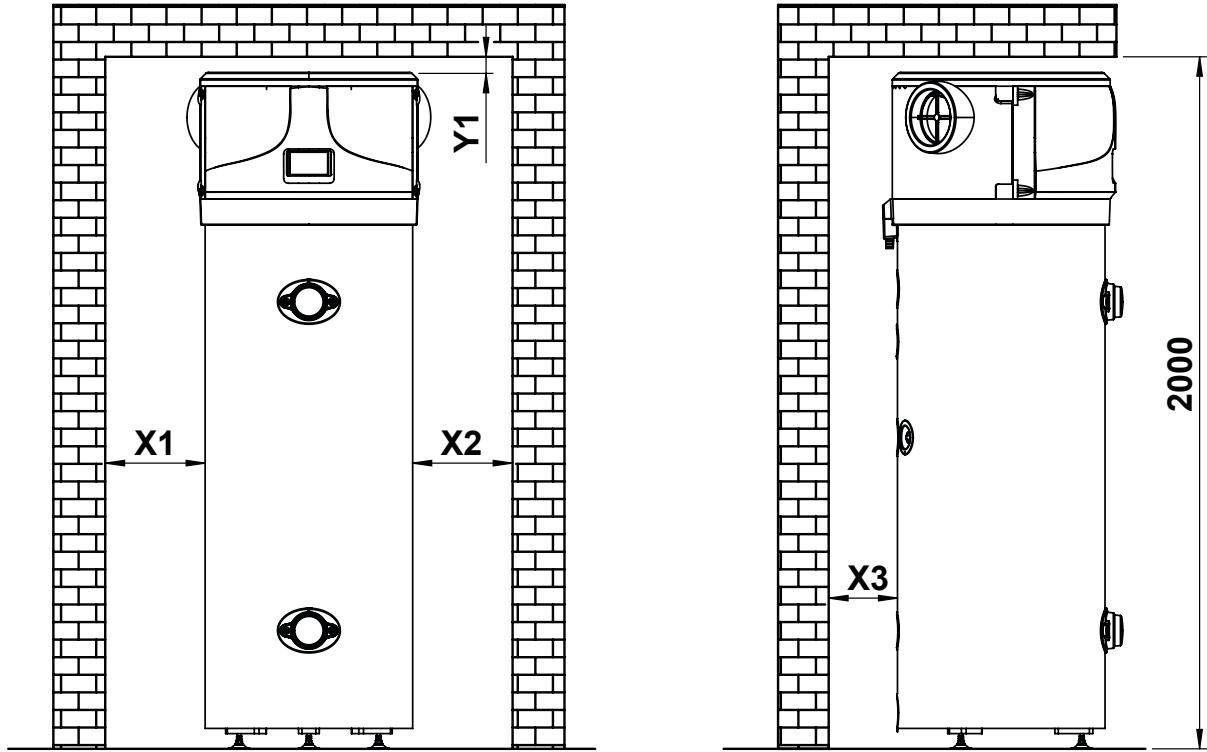


Fig. 20



Fig. 21

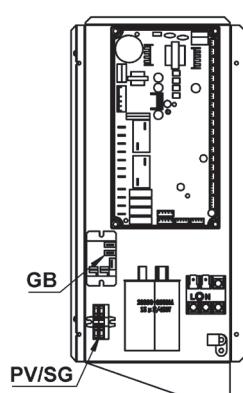
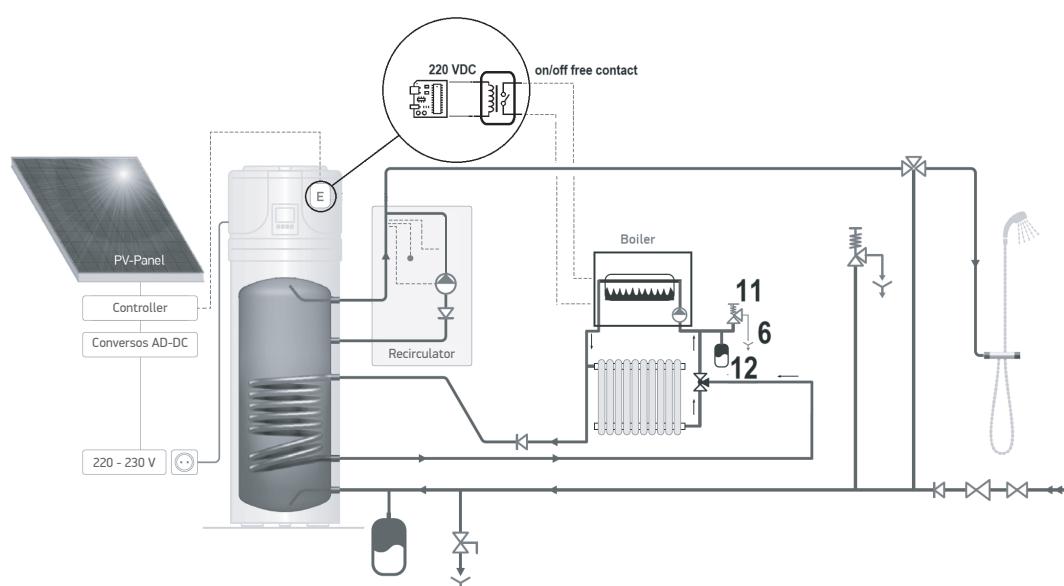
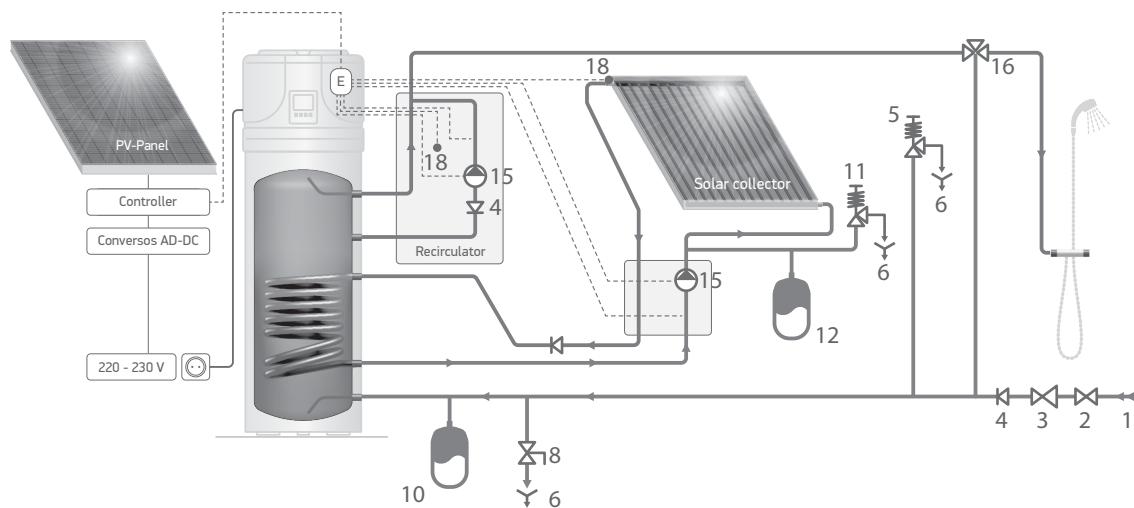


Fig. 22

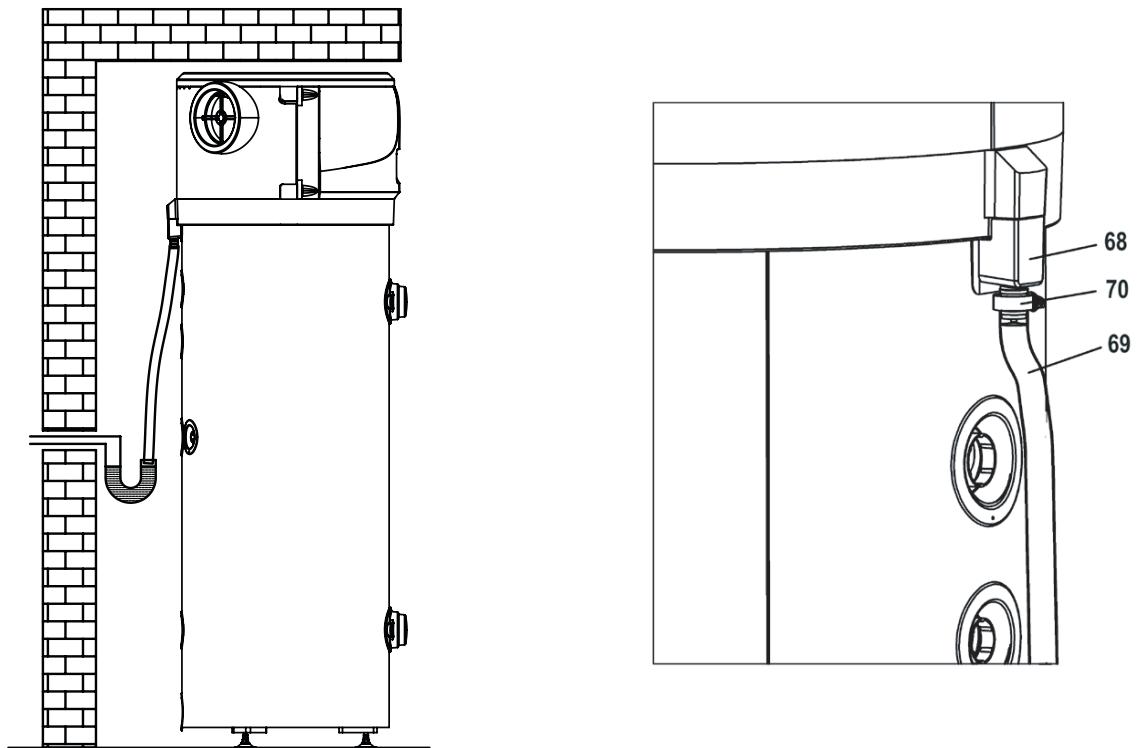


Fig. 23

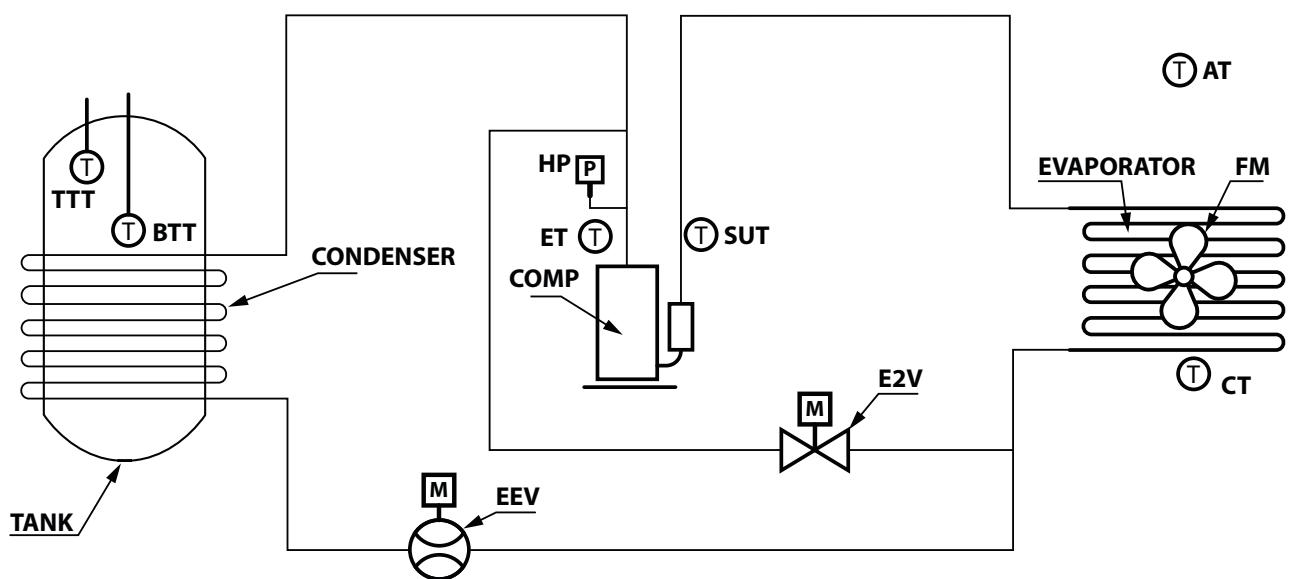


Fig. 24

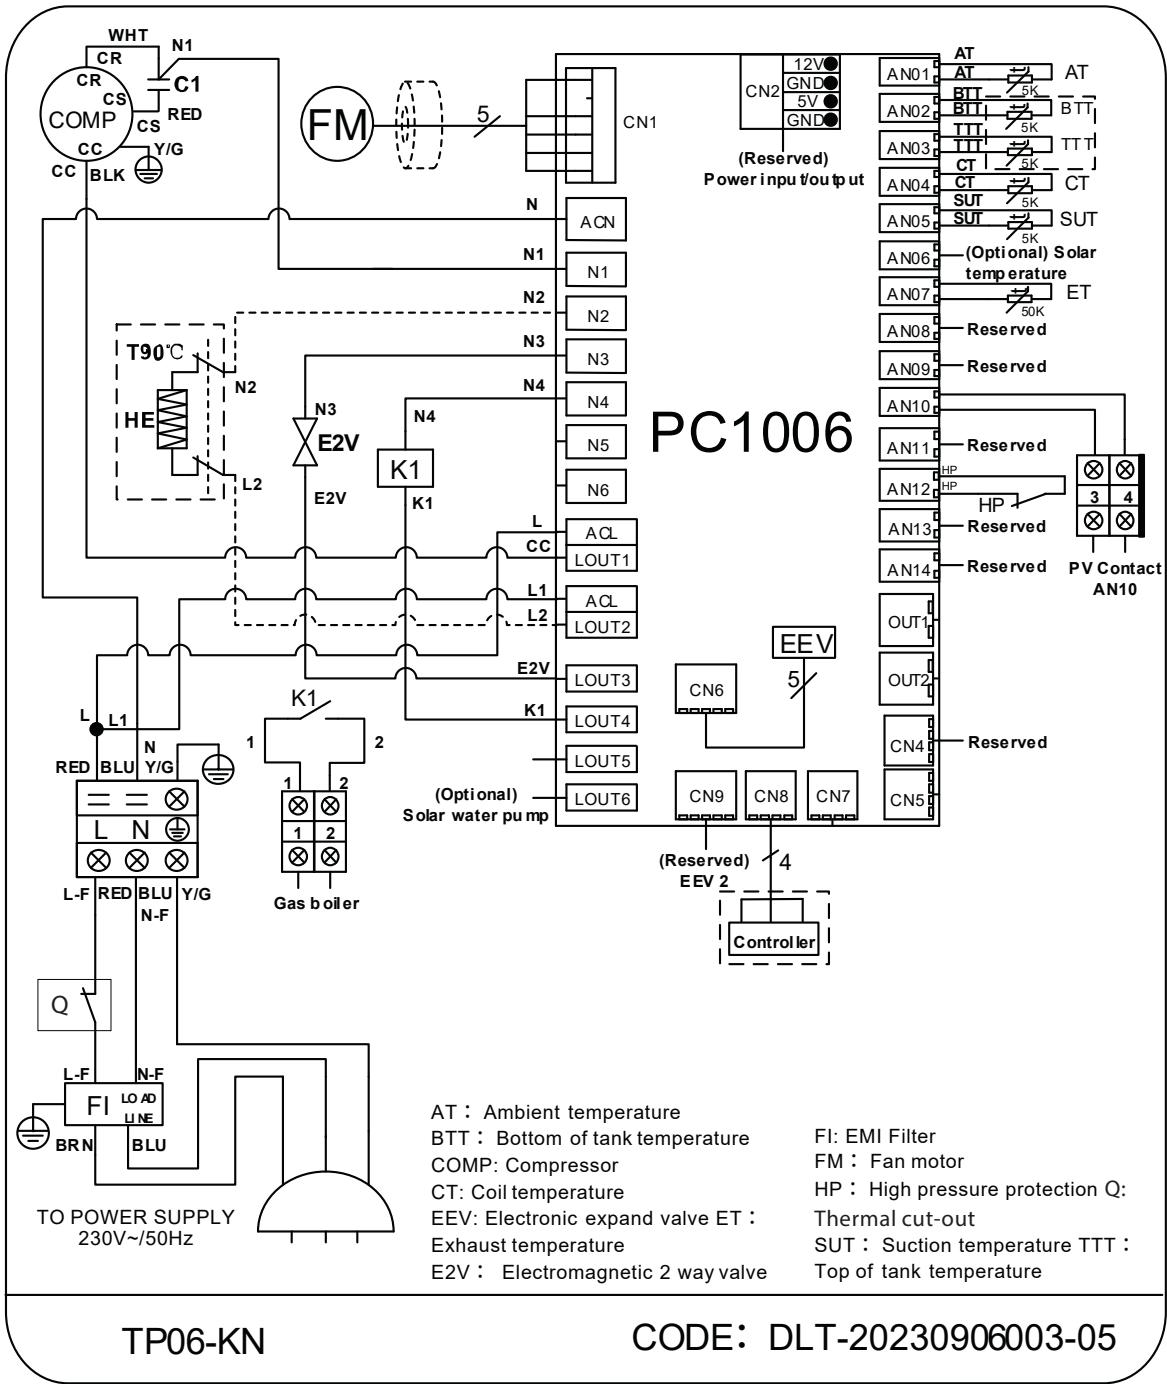


Fig. 25

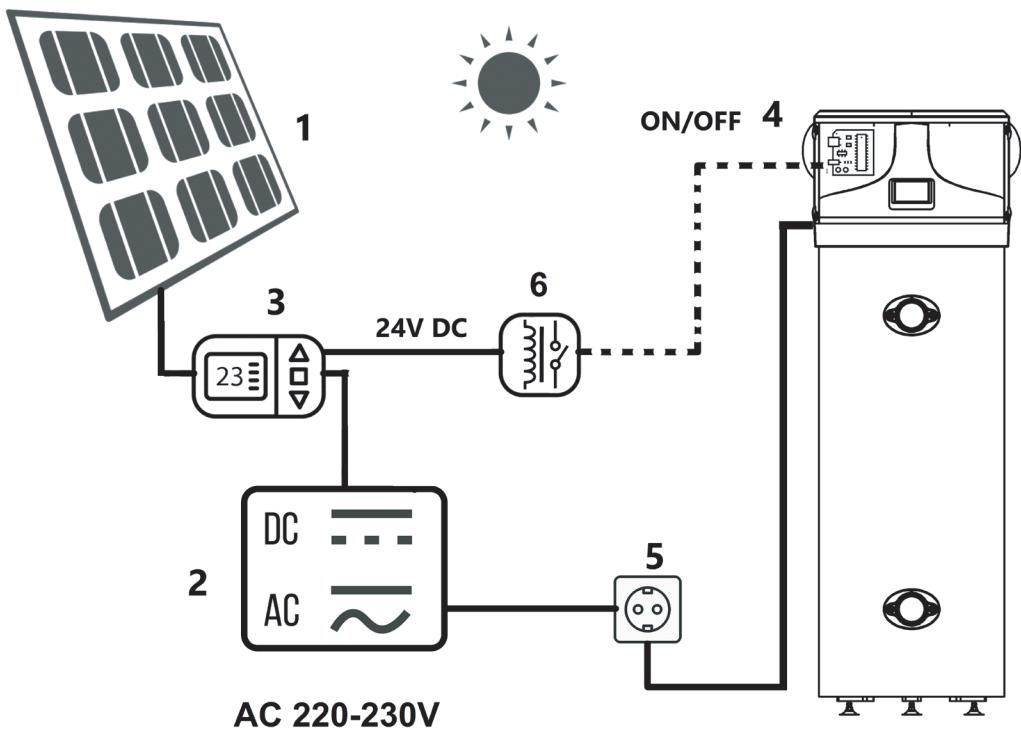


Fig. 26

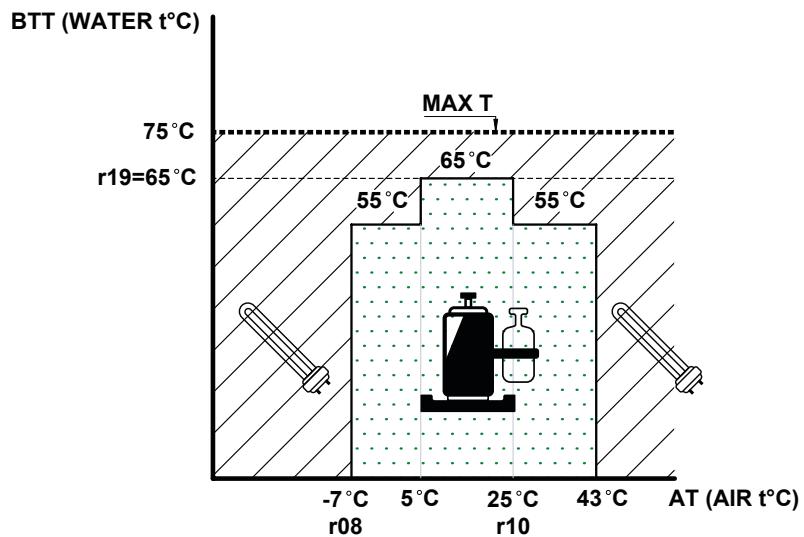


Fig. 27

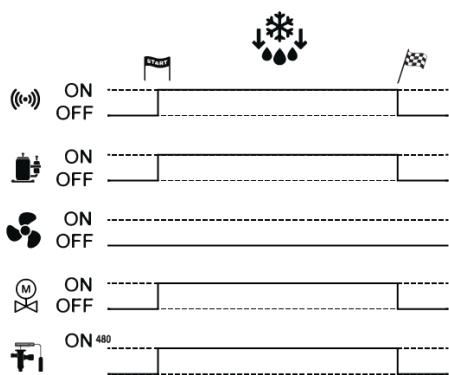


Fig. 28

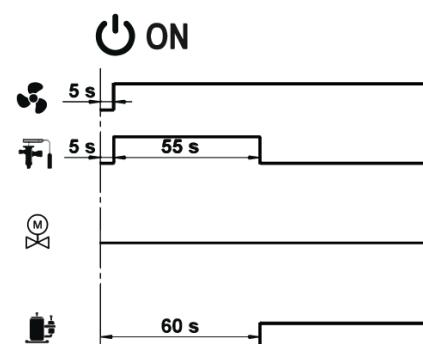


Fig. 29

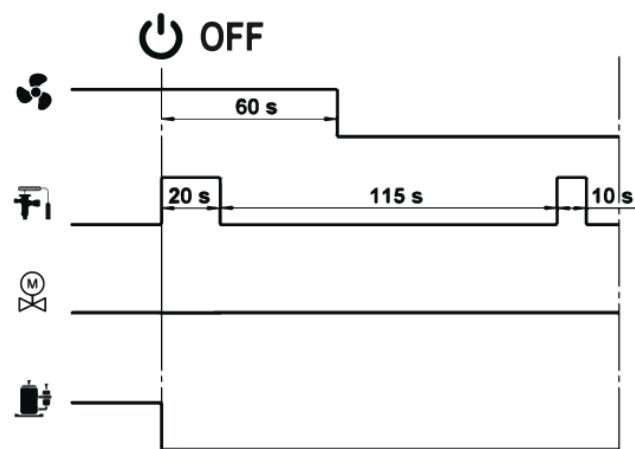


Fig. 30

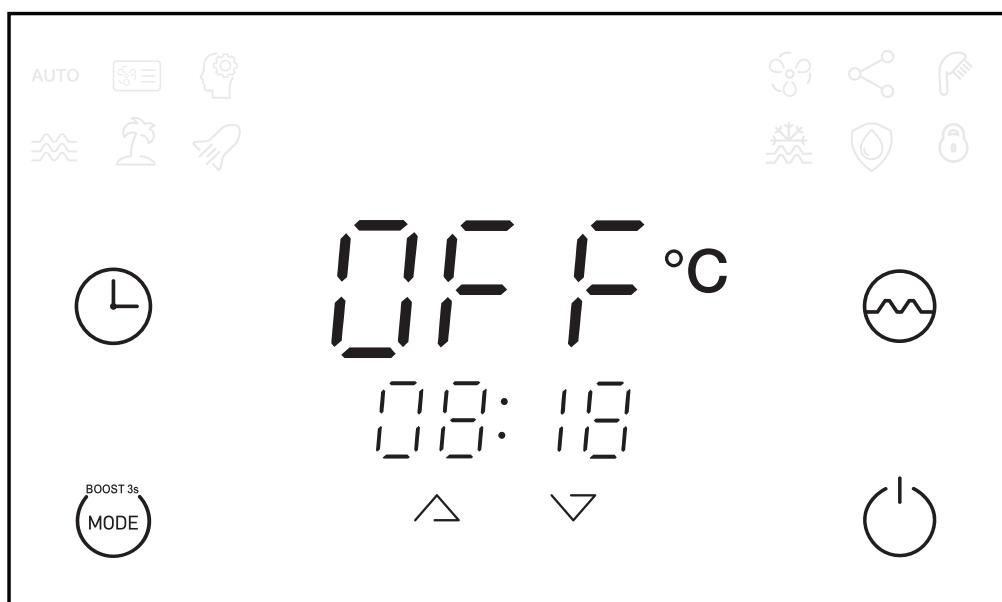


Fig. 31



TESY
It's impressive

TESY LTD.
48 Madara Blvd.,
9700 Shumen, Bulgaria
www.tesy.com